


## Stick-on Fitting Template (flush mounting)

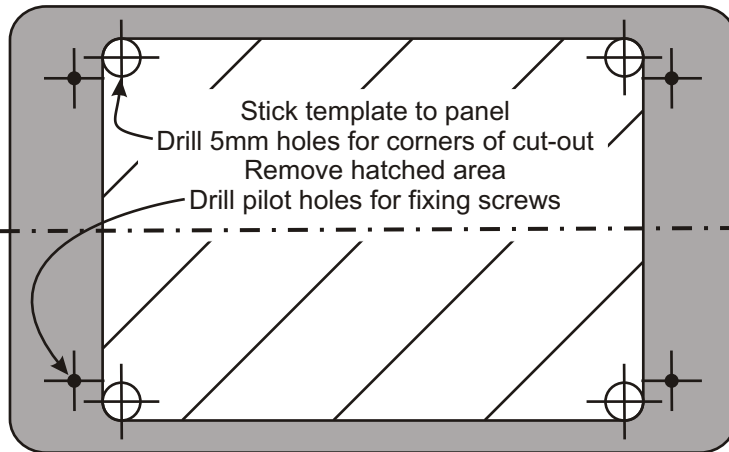

© Nereus Alarms Ltd

281007

## GAS ALARM - QUICK GUIDE

<b>WARM UP</b>	<b>Power</b> lamp flashes slowly
<b>NORMAL</b>	<b>Power</b> lamp on continuously
<b>ALARM</b>	<b>Alarm</b> lamp flashes
<b>TEST</b>	Push button to test
<b>HUSH</b>	Push and hold button for 4 seconds to silence <b>Alarm</b> or <b>Fault</b> buzzer
<b>SUPPLY FAULT</b>	🔧 lamp lights. <b>Power</b> lamp flashes once every 5 seconds
<b>SENSOR FAULT</b>	🔧 lamp lights. <b>Alarm</b> lamp flashes once every 5 seconds

www.nereusalarms.com

010908

### GAS SENSOR LOCATION

--	--

www.nereusalarms.com

### GAS SENSOR LOCATIONS


www.nereusalarms.com

### GAS SENSOR LOCATIONS


www.nereusalarms.com